
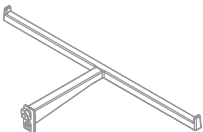
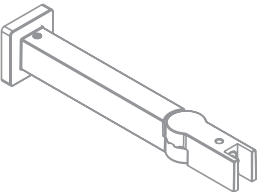
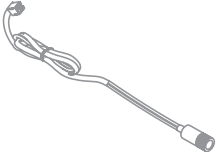









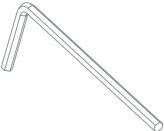
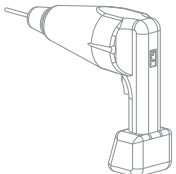
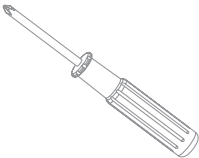
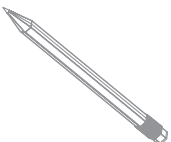
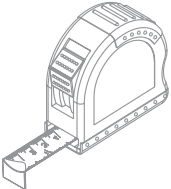





# User manual

Produkthandbuch  
Manual del producto  
Manuel du produit  
Product handleiding

				
50681-R (15REM) 50682-R (18REM)	16003 (15/18x)	42550 (3x)	16126 1500mm (1x)	
				
16905 M4x4 (4x)	16186 M4x20 (1x)	95150 M4 (2x)	95624 M4 (2x)	95092 S6x39 (2x)
				
16182 Ø7,2x16 (2x)	95132 3.5x50 (2x)	95052 M4x45 (2x)	16234 21x21x1,5mm (2x)	

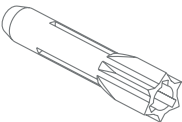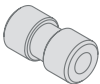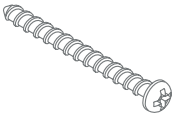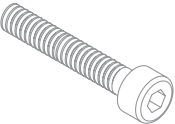				
92041 #2 94060 #2.5 94034 #3	6mm (stone) 4,5mm (plexi) 2mm (wood)	P2		

# 1

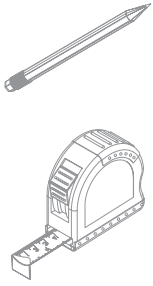

- A** 7 positions: 554 mm  
 8 positions: 631 mm  
 9 positions: 708 mm  
 10 positions: 785 mm  
 11 positions: 862 mm  
 12 positions: 939 mm  
 13 positions: 1016 mm  
 14 positions: 1093 mm  
 15 positions: 1170 mm  
 16 positions: 1247 mm  
 17 positions: 1324 mm  
 18 positions: 1380 mm


**B\*** 190mm

**C\*\*** 1900mm


**D\*\*** 16 positions: 650 mm  
 17 positions: 727 mm  
 18 positions: 706 mm

- \* - Advised distance  
 - Vorgeschagener Abstand  
 - Distancia aconsejable  
 - Distance recommandée  
 - Geadviseerde afstand

- \*\* - 3rd wall bracket  
 - Dritte Wandhalterung  
 - Soporte de pared tercera  
 - 3 support mural  
 - 3e muurbeugel

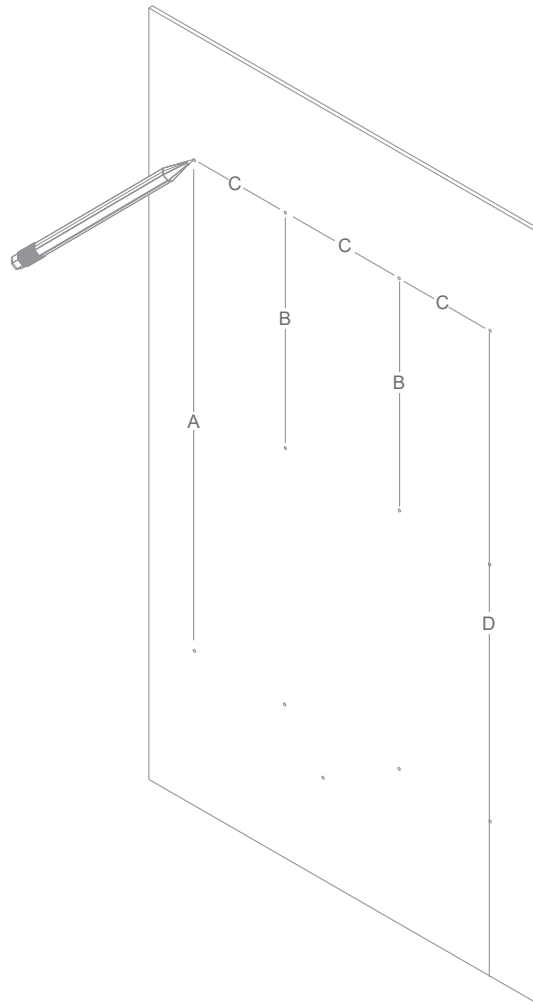

# 2

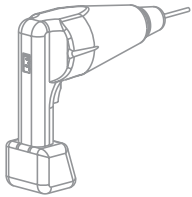

- A** Ø2 mm - for assembly on a wooden panel  
 - für die Montage auf einer Holzplatte  
 - para el montaje en un panel de madera  
 - pour le montage sur un panneau en bois  
 - voor assemblage op een houten paneel


- Ø4,5 mm - for assembly on a Plexi panel  
 - für die Montage auf einer Plexiglasplatte  
 - para el montaje en un panel de plexiglás  
 - pour le montage sur un panneau en plexi  
 - voor assemblage op een plexi paneel

**B** Ø4,5 mm

**C** Ø8 mm


**D** Ø11,5 mm

- When using receiver unit  
 - Bei der Verwendung von Empfängereinheit  
 - Cuando se utiliza la unidad receptora  
 - Lorsque vous utilisez l'unité de réception  
 - Bij gebruik van de ontvangstunit

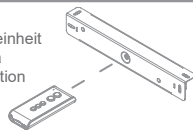



Ø16 mm

- When using external receiver eye  
 - Bei der Verwendung von externen Empfänger Augen  
 - Cuando se utiliza el ojo receptor externo  
 - Lors de l'utilisation d'œil récepteur externe  
 - Bij gebruik van een extern ontvangst-oog

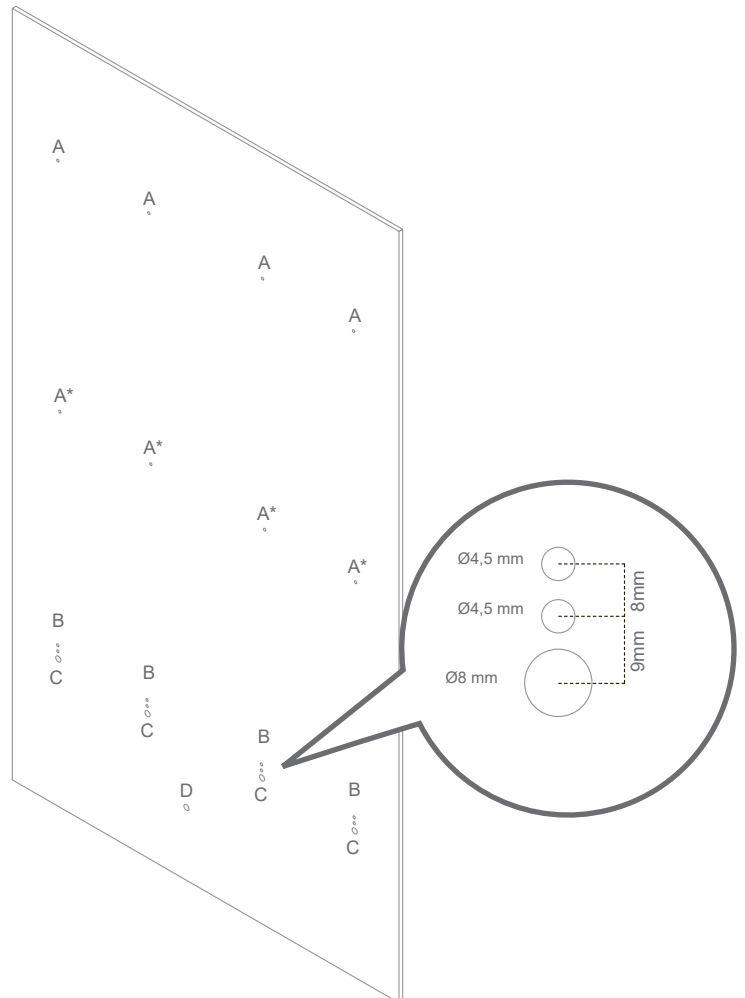



### 3 A

- for assembly on a wooden panel
- für die Montage auf einer Holzplatte
- para el montaje en un panel de madera
- pour le montage sur un panneau en bois
- voor assemblage op een houten paneel

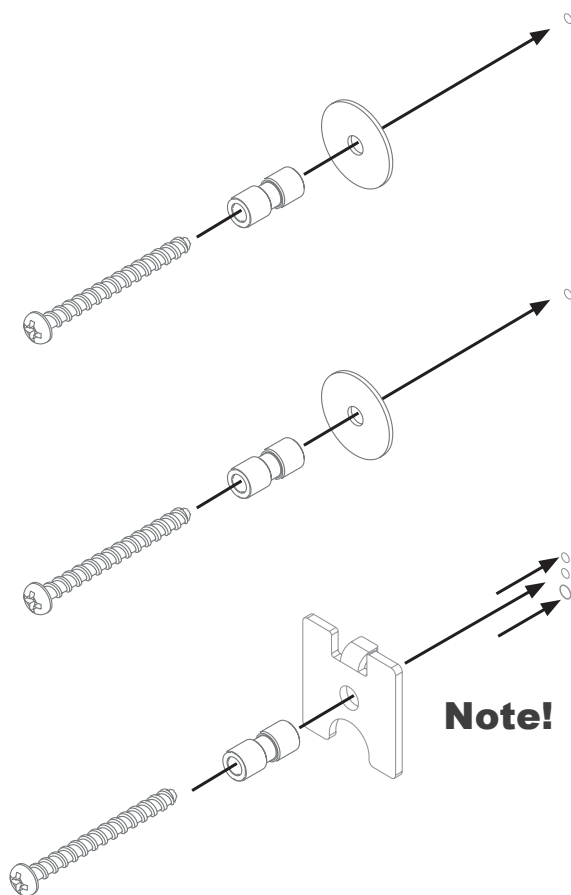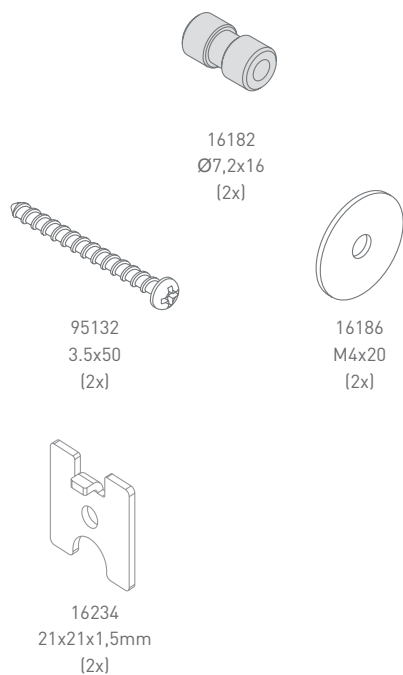


### 3 B

- for assembly on a Plexi panel
- für die Montage auf einer Plexiglasplatte
- para el montaje en un panel de plexiglás
- pour le montage sur un panneau en plexi
- voor assemblage op een plexi paneel

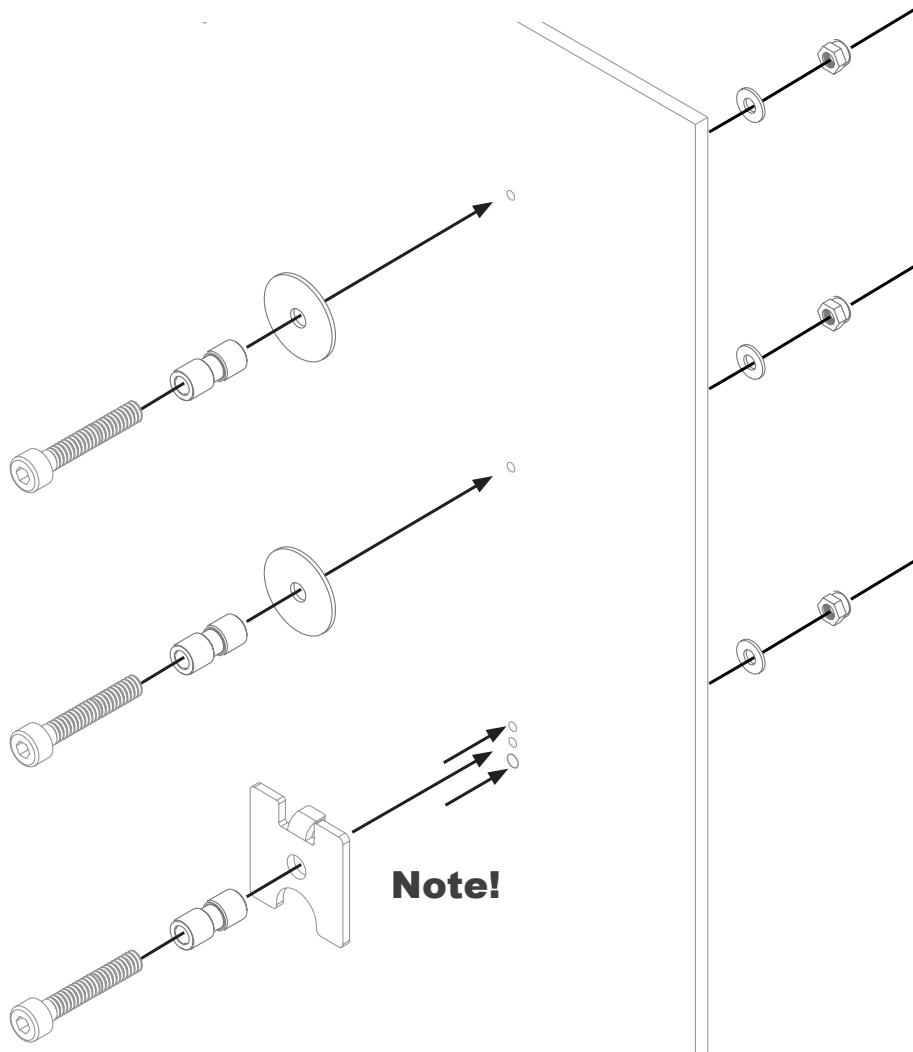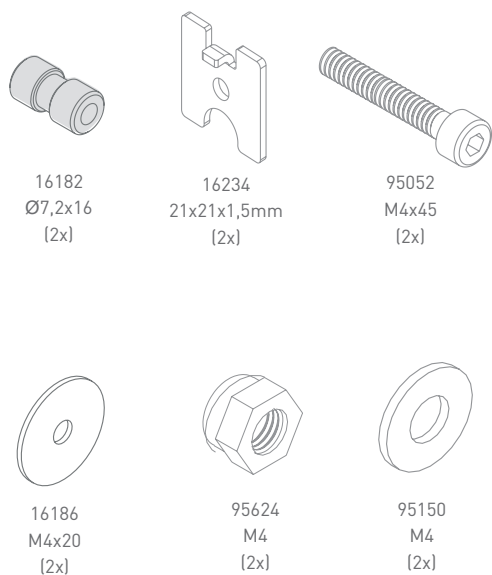


4

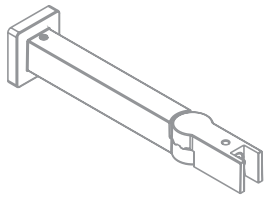


42550  
(3x)





50681-R (15REM)  
50682-R (18REM)

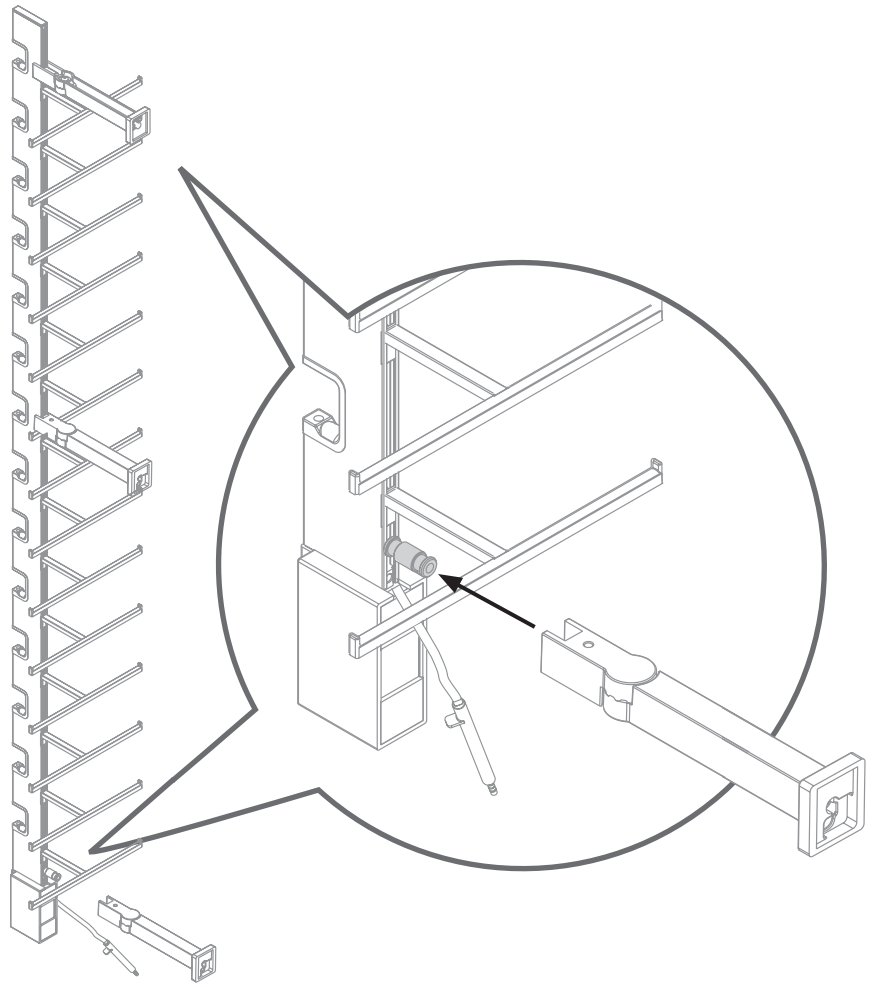



5

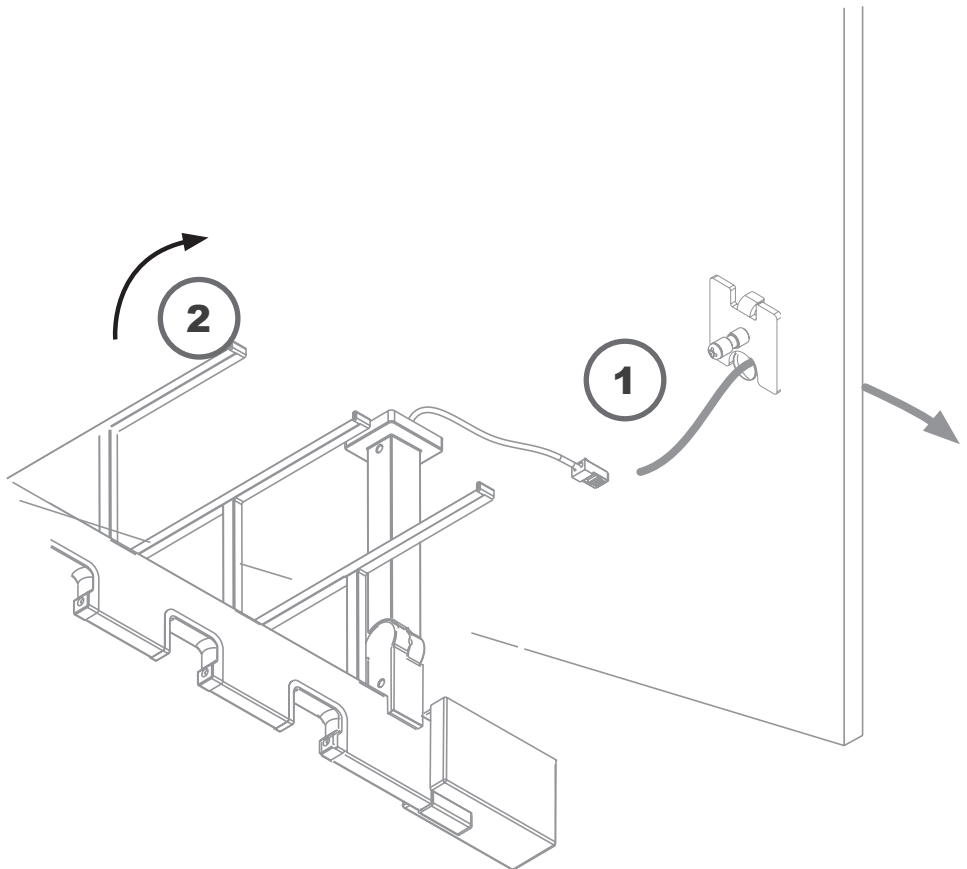


6

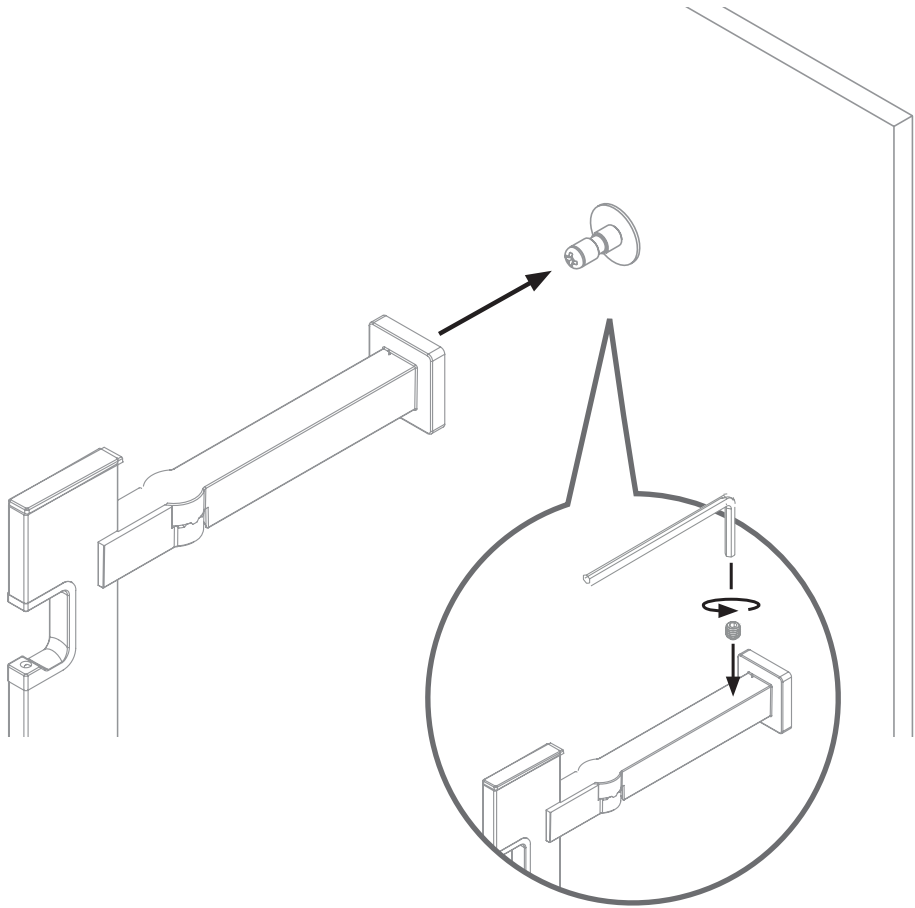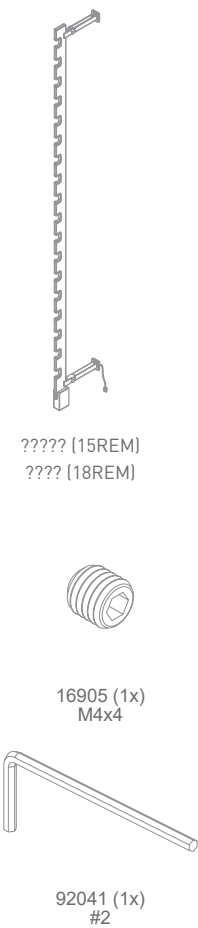



7

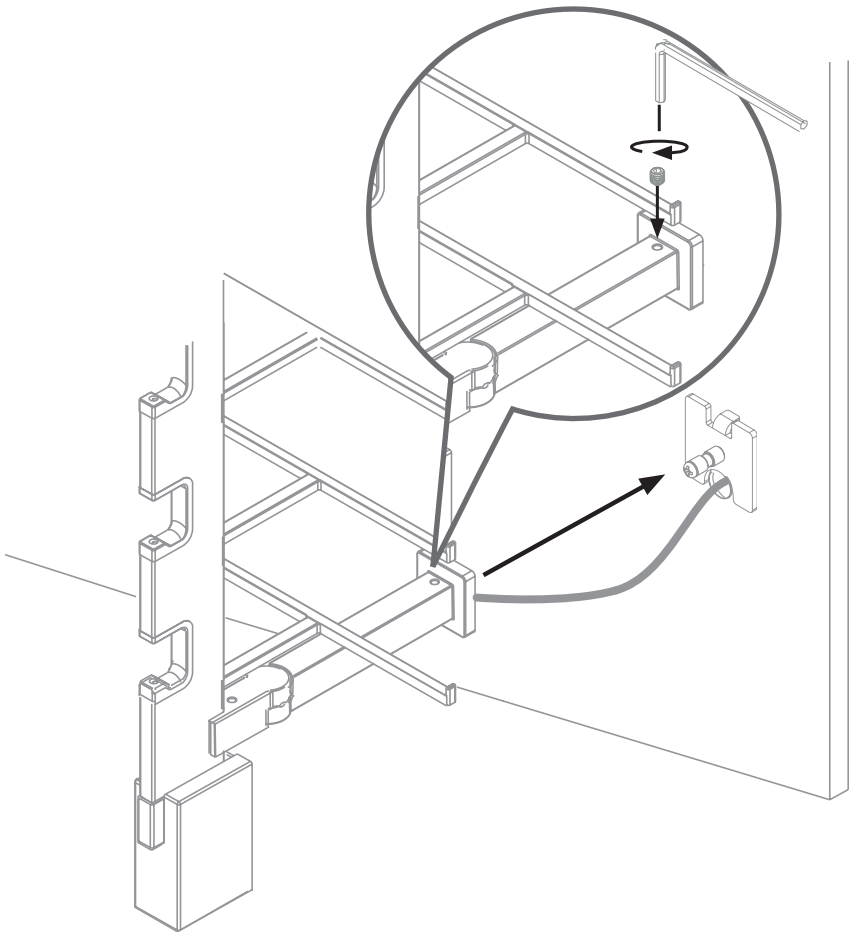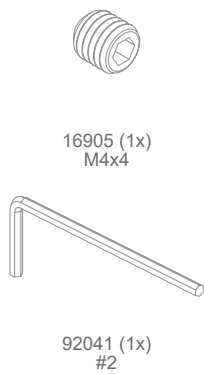

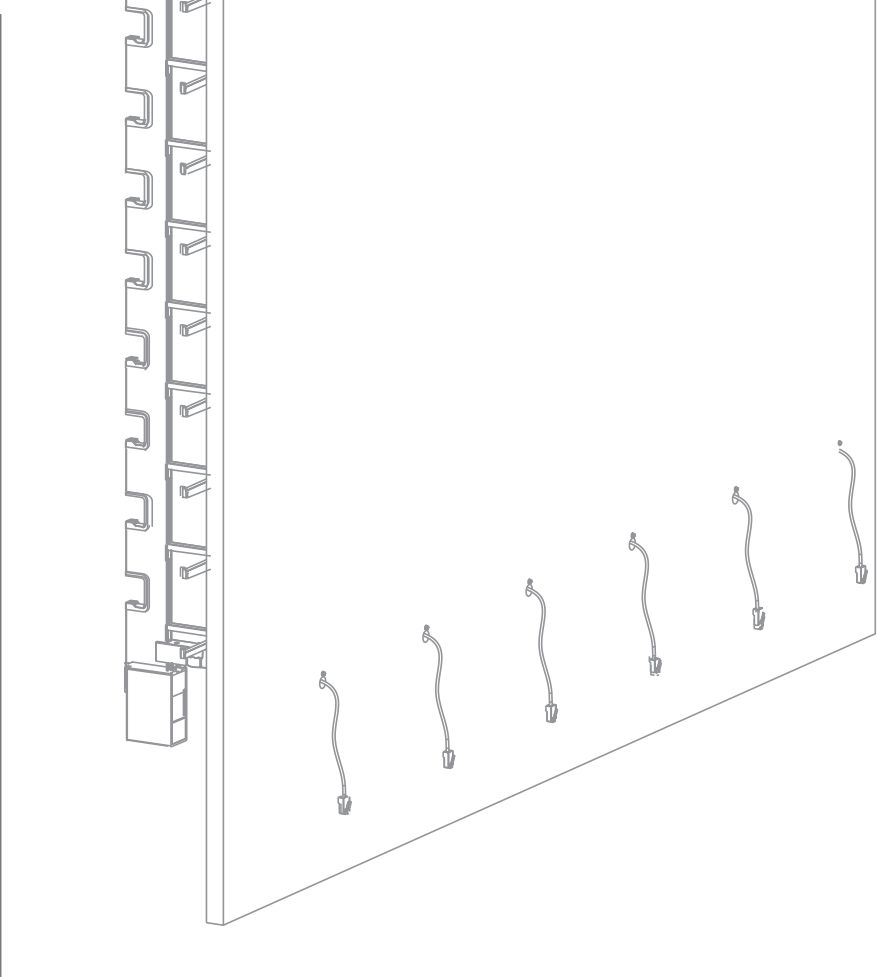

# POSITIONING OF THE RECEIVER UNIT

Even before deciding where you will mount your receiver eye, please keep the following lengths of the various cables in mind.

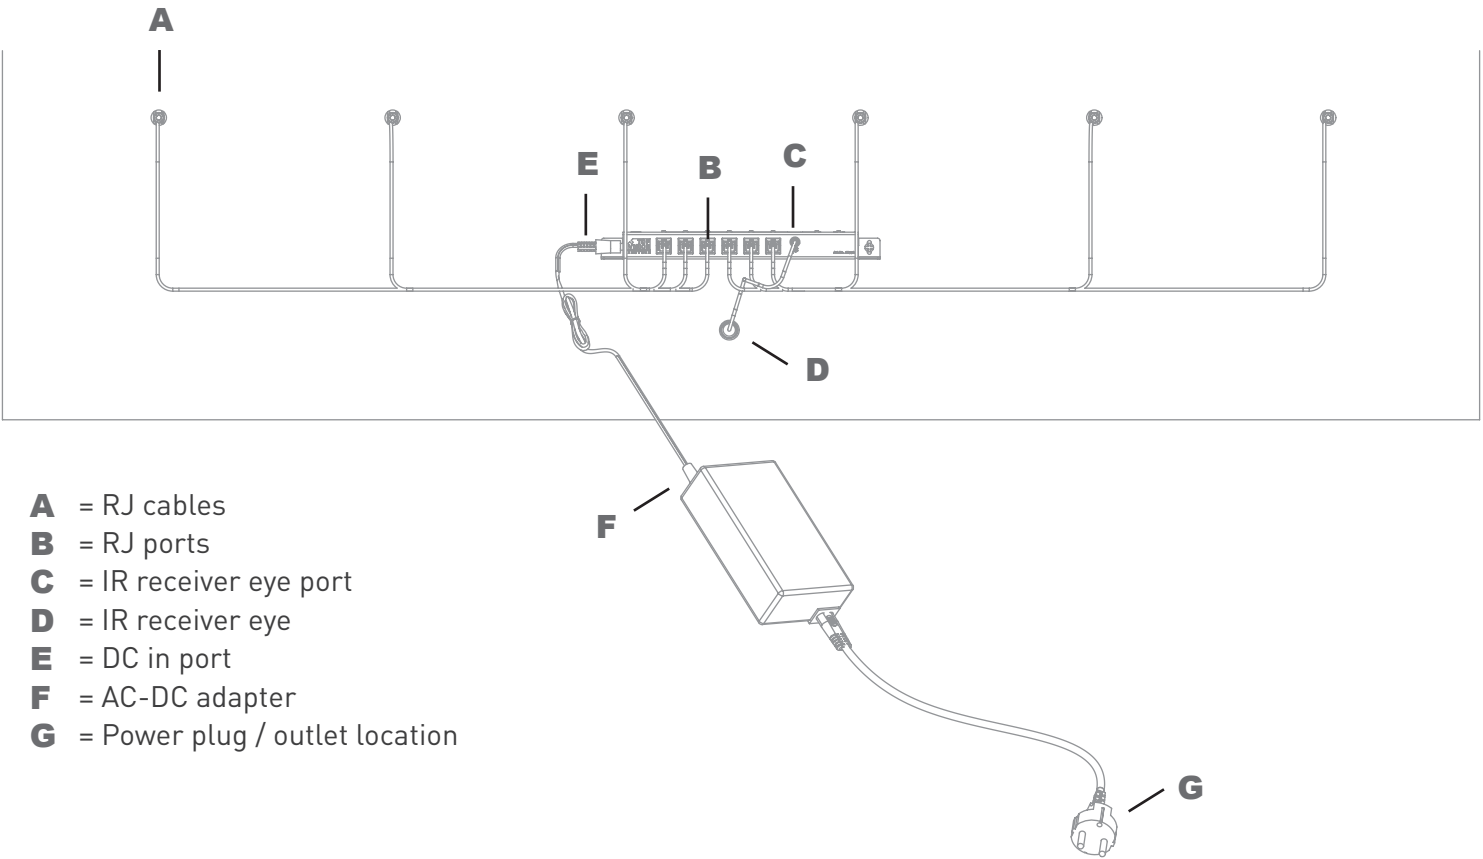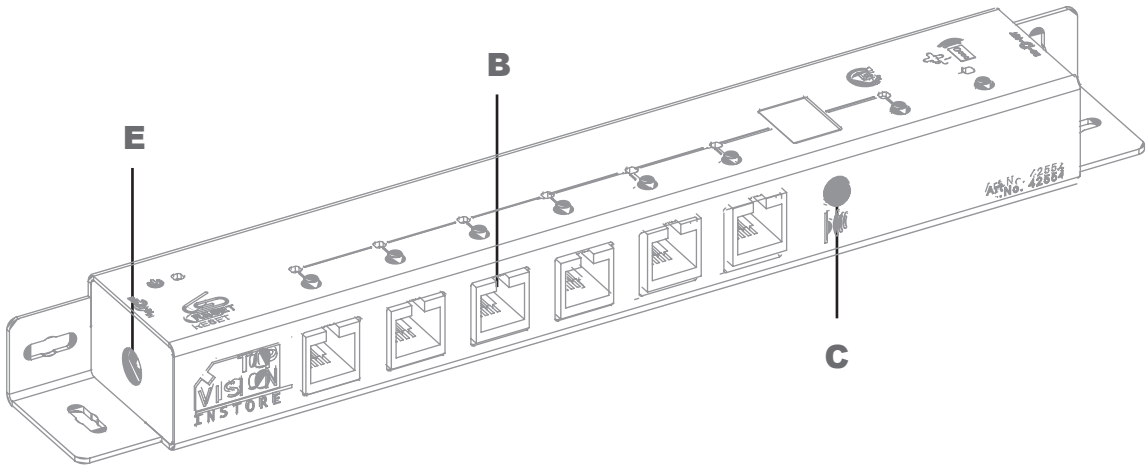

- A** = RJ cables
- B** = RJ ports
- C** = IR receiver eye port
- D** = IR receiver eye
- E** = DC in port
- F** = AC-DC adapter
- G** = Power plug / outlet location

## A TO B

Please note that the distance from **A** (RJ cables of the eyewear display columns) to **B** (RJ ports) does not exceed 125cm.

## C TO D

Please note that the distance from **C** (IR receiver eye port) to **D** (IR receiver eye) does not exceed 125cm.

## E TO F

Please note that the distance from **E** (DC in port) to **F** (AC-DC adapter) does not exceed 170cm.

## E TO G


Please note that the distance from **E** (DC port) to **G** (power outlet) does not exceed 350cm.



# MOUNTING ON A BACK OF A PANEL


## Option 1

HORIZONTAL - STRAIGHT

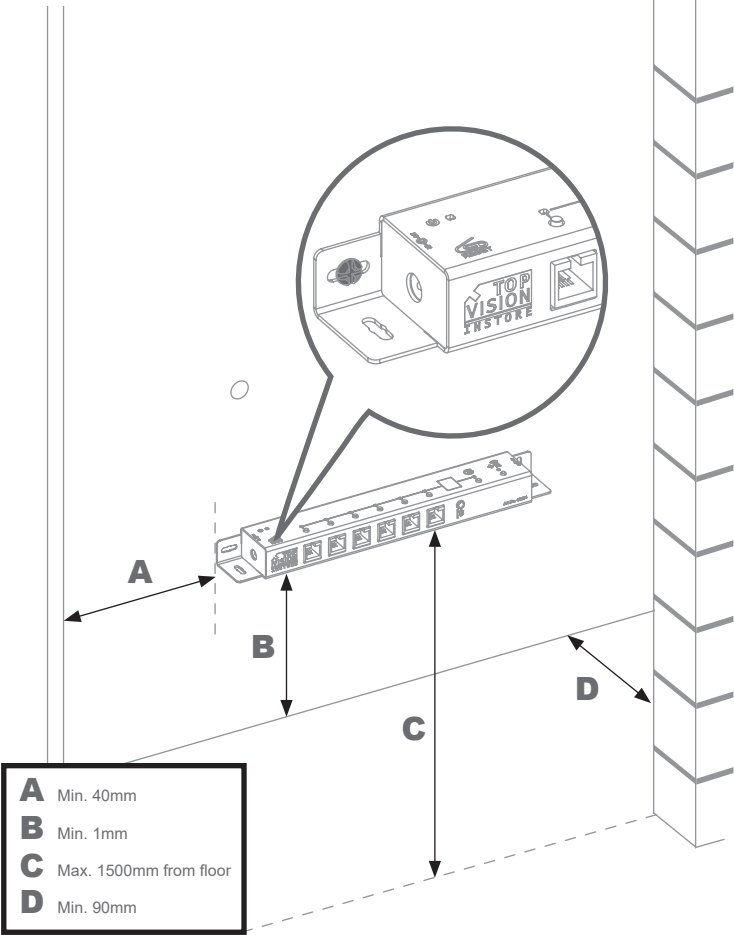


## Option 2

HORIZONTAL - FLAT

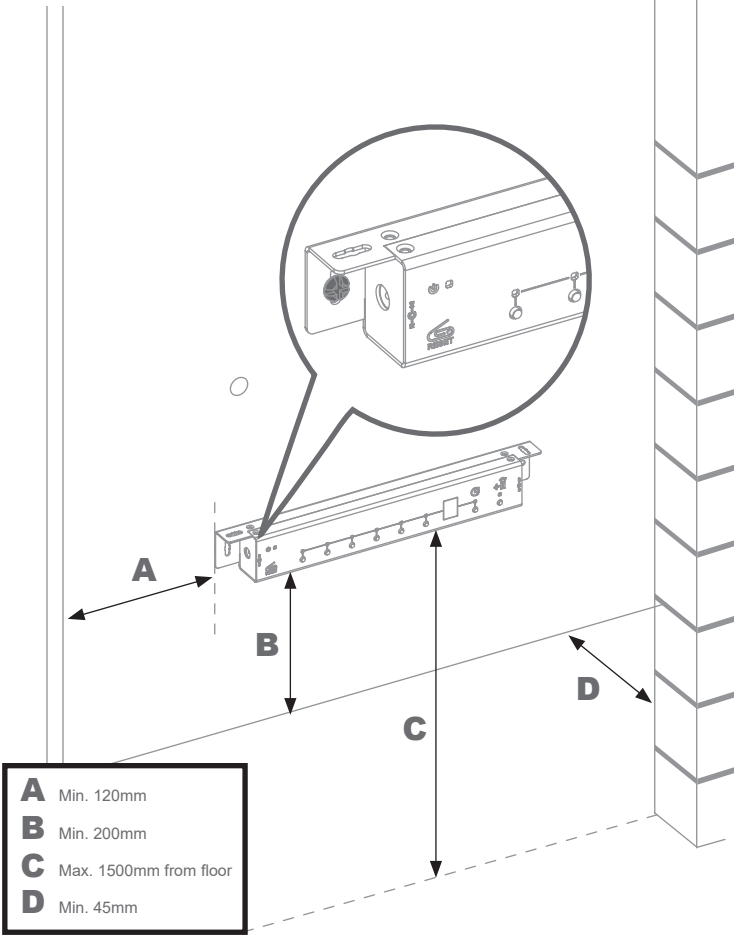


## Option 3

VERTICAL - STRAIGHT

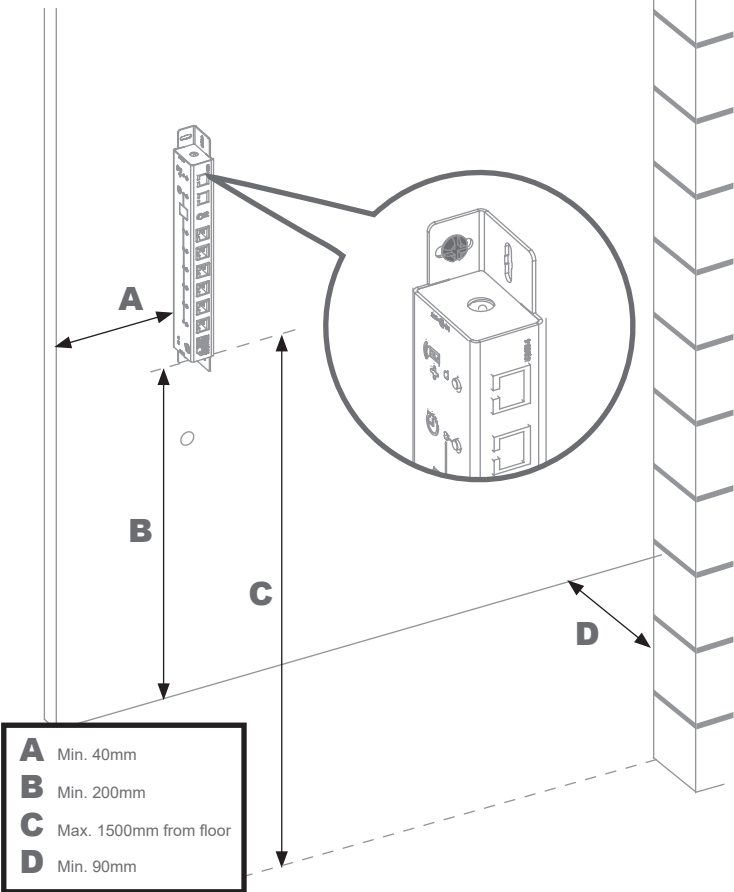

## Option 4


VERTICAL - FLAT

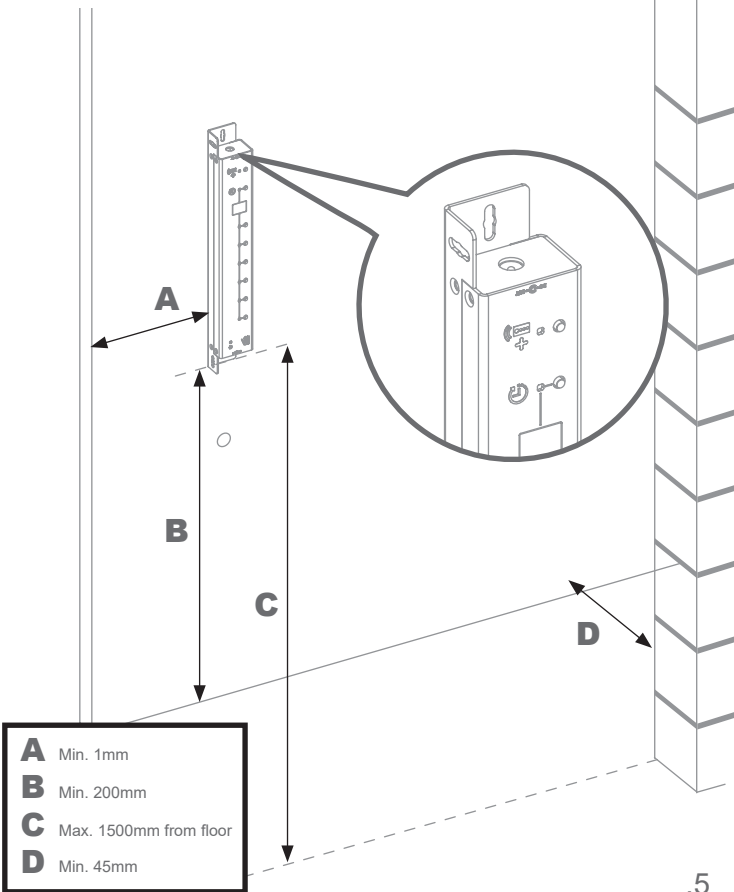

# MOUNTING ON THE BACK WALL


## Option 1

HORIZONTAL - STRAIGHT

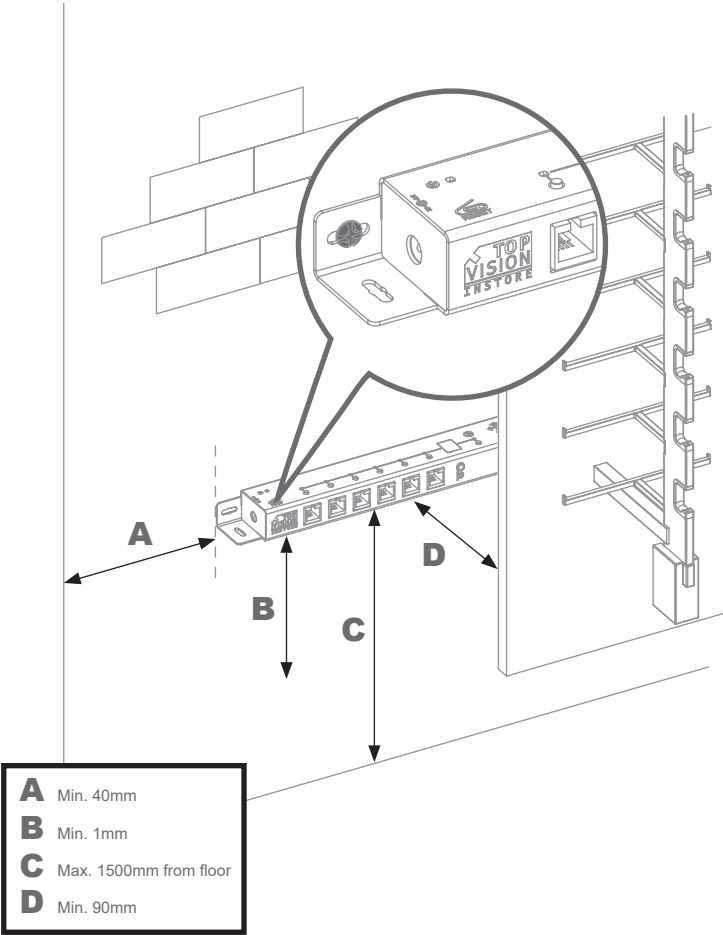


## Option 2

HORIZONTAL - FLAT

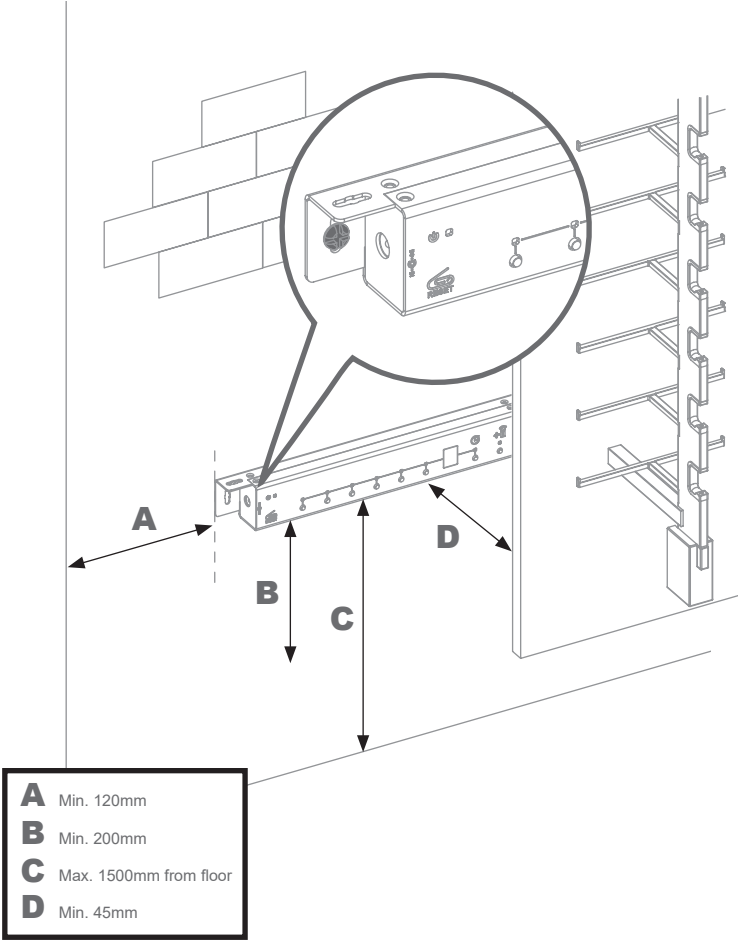


## Option 3

VERTICAL - STRAIGHT

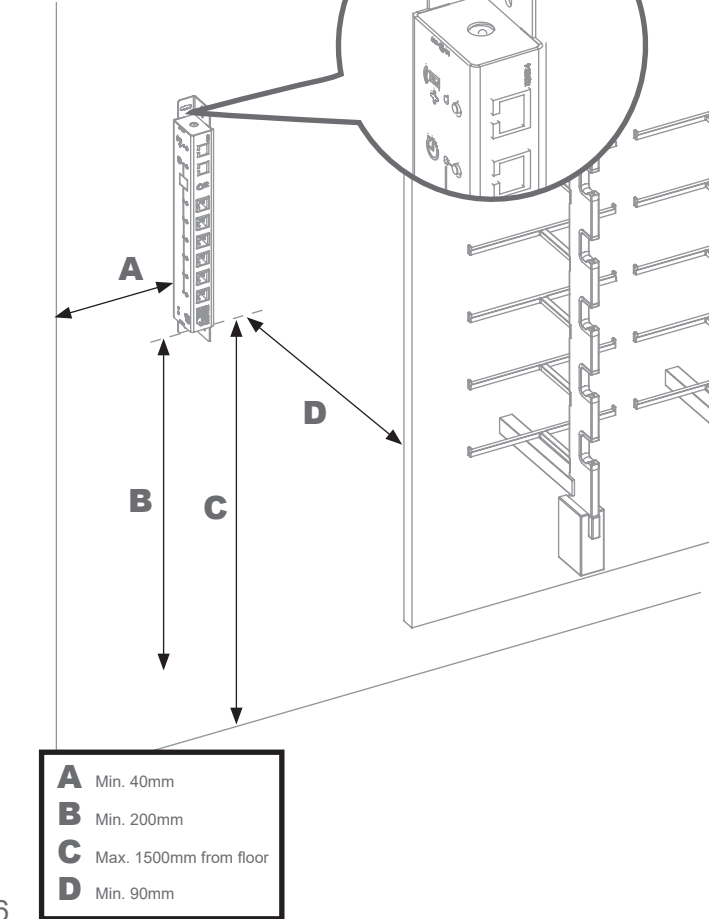


## Option 4

VERTICAL - FLAT

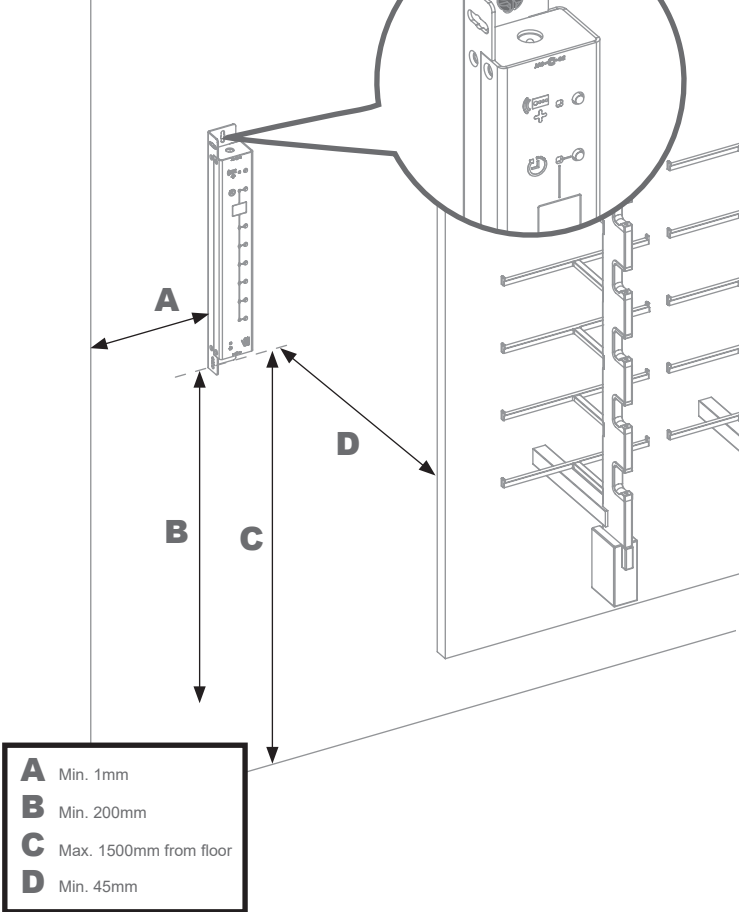


# ASSEMBLING THE RECEIVER UNIT


1

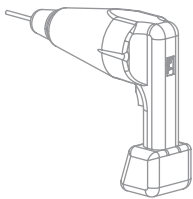


DRILL  
Ø2.5

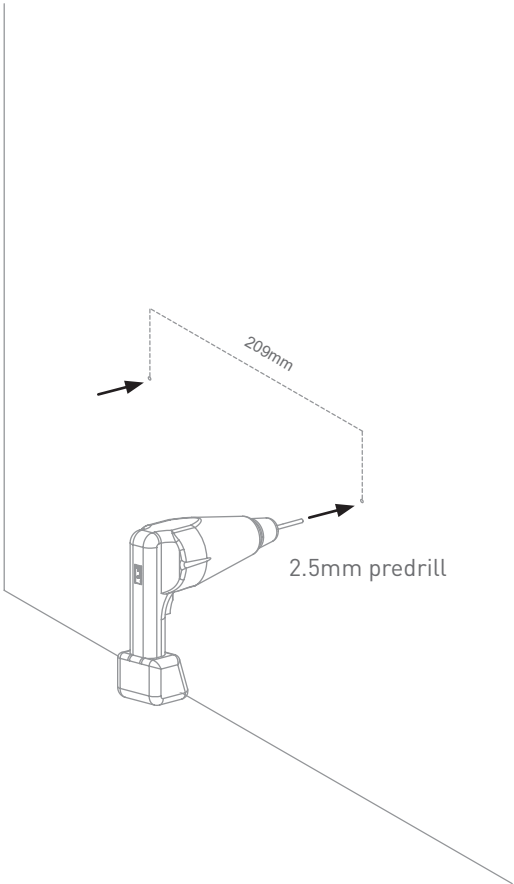


2

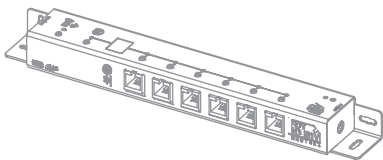

 
RECEIVER UNIT  
50542  
226x32x22mm  
1x



SCREW  
95071  
3.9x13mm  
2x

 


SCREWDRIVER  
P1

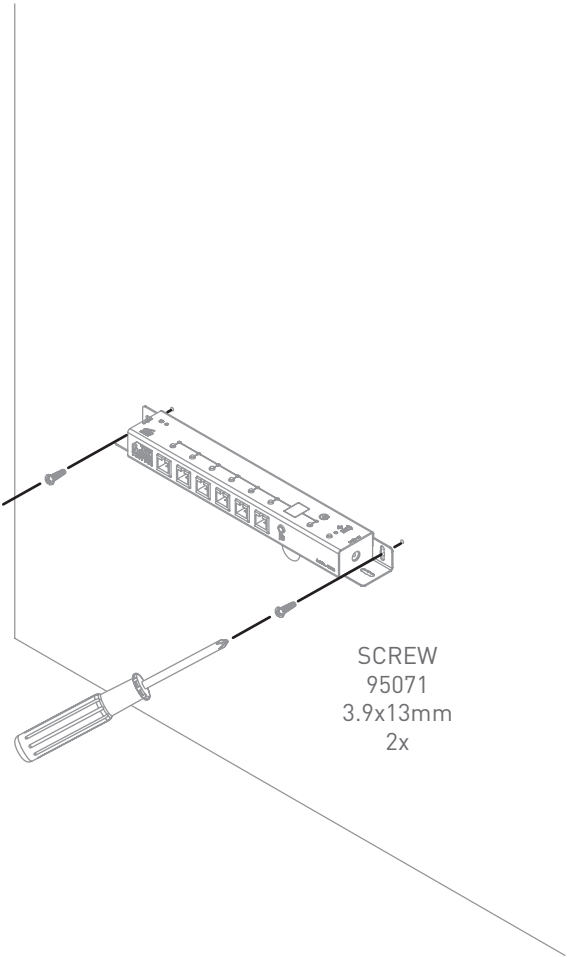


SCREW  
95071  
3.9x13mm  
2x

# ASSEMBLING THE RECEIVER EYE


3

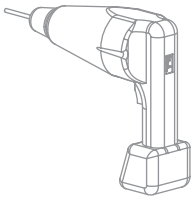


DRILL  
Ø16

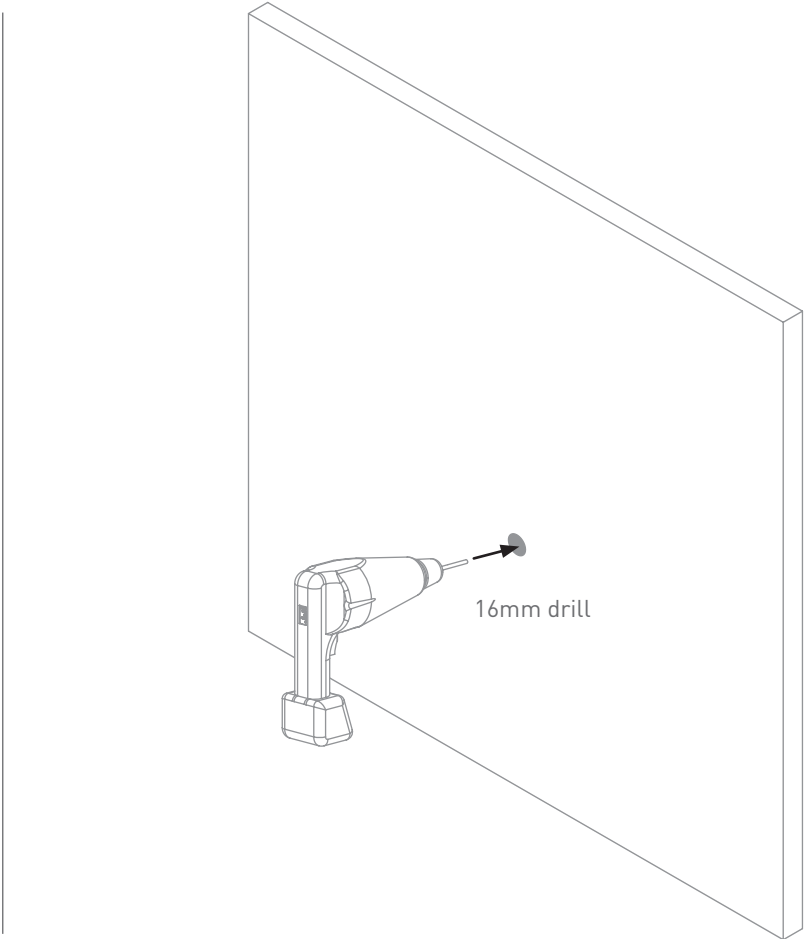

4

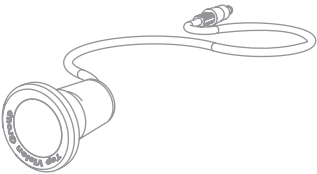

RECEIVER EYE  
22476  
1450xØ16mm  
1x

 


SPACER  
95227  
25x10mm  
1x







#22


Backview

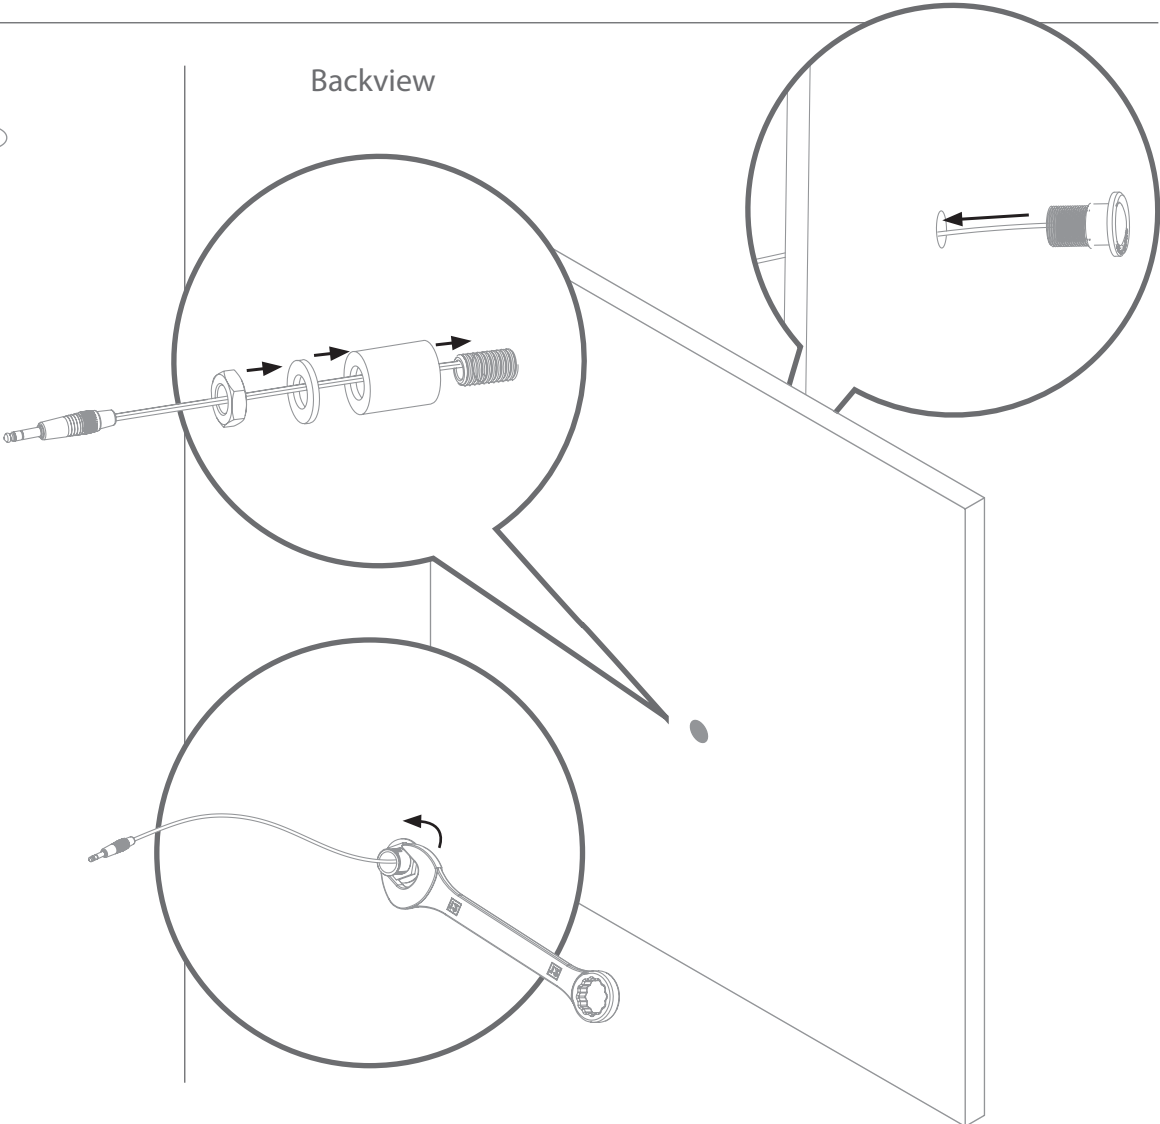

# ASSEMBLING THE CABLES

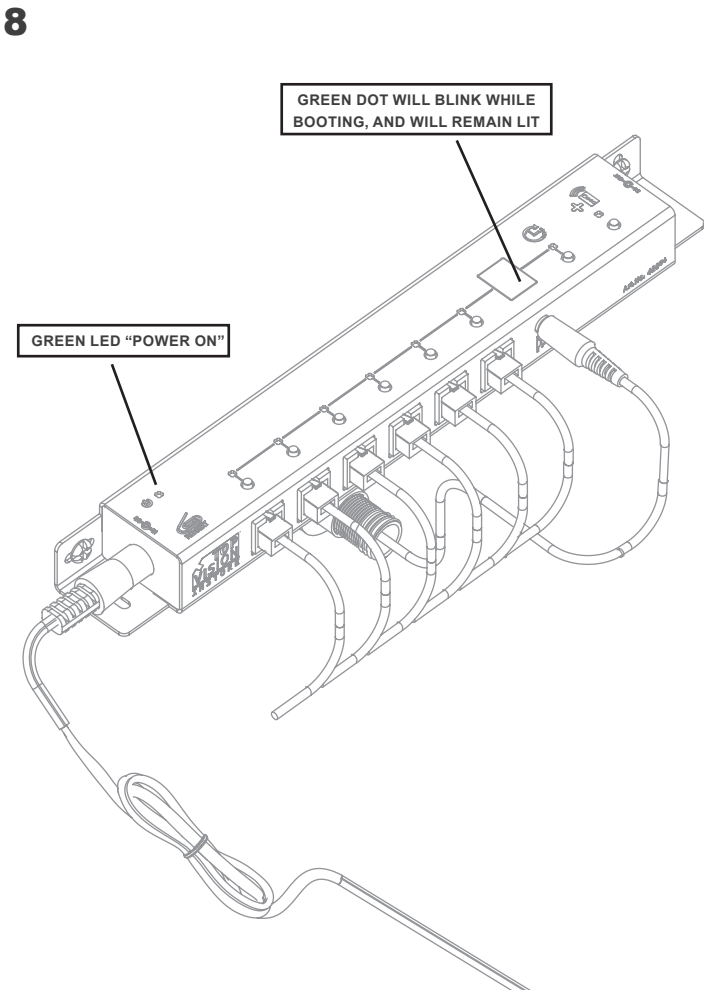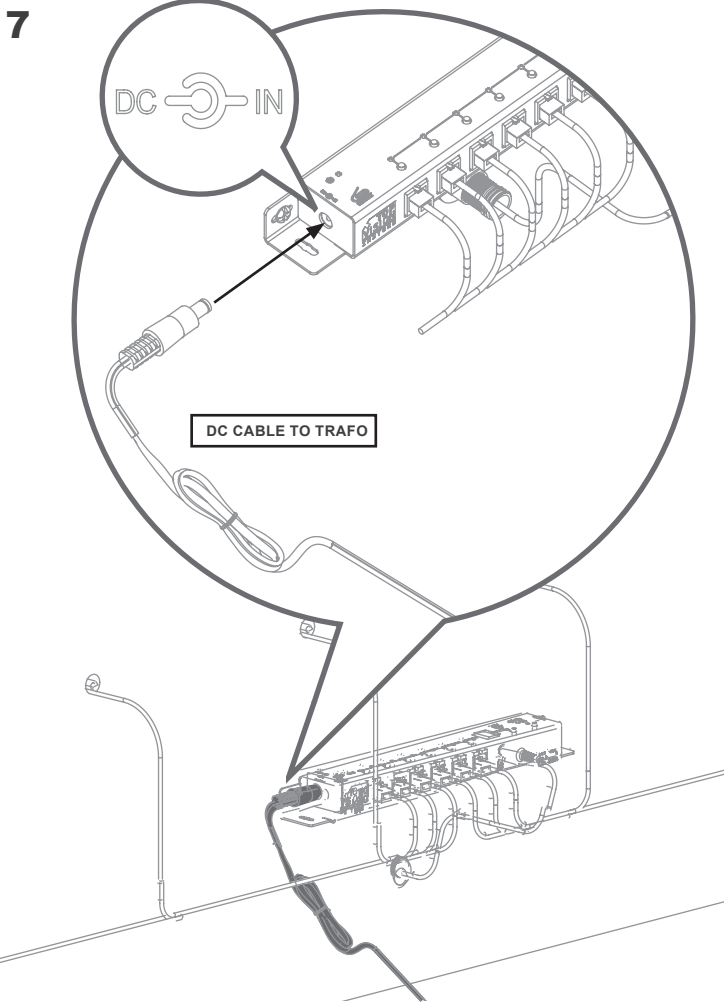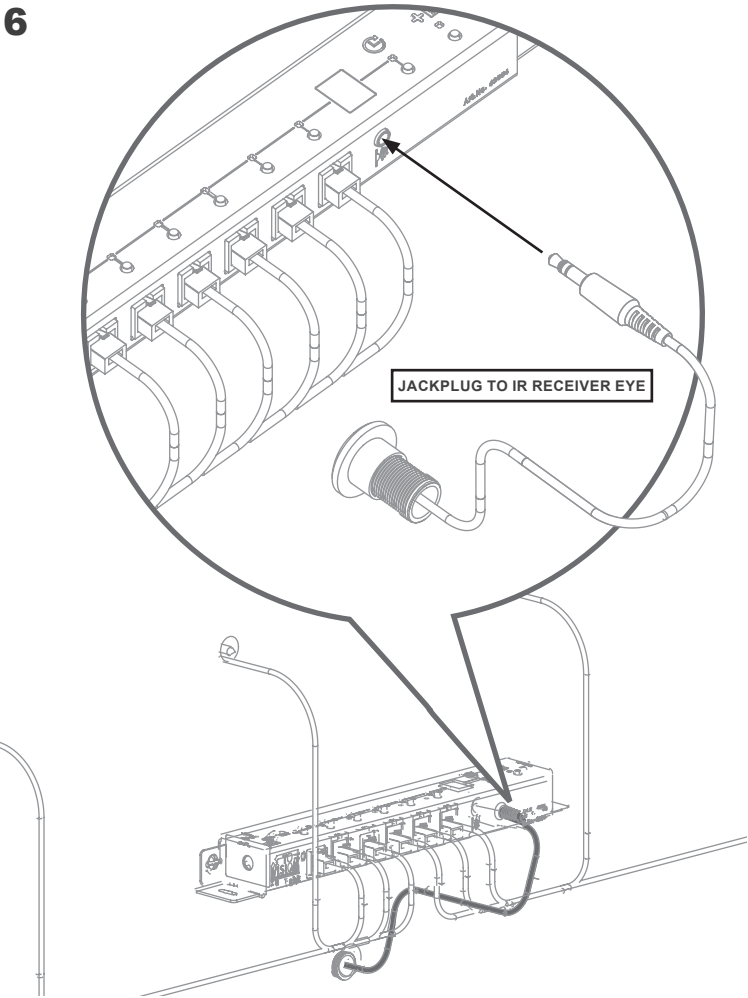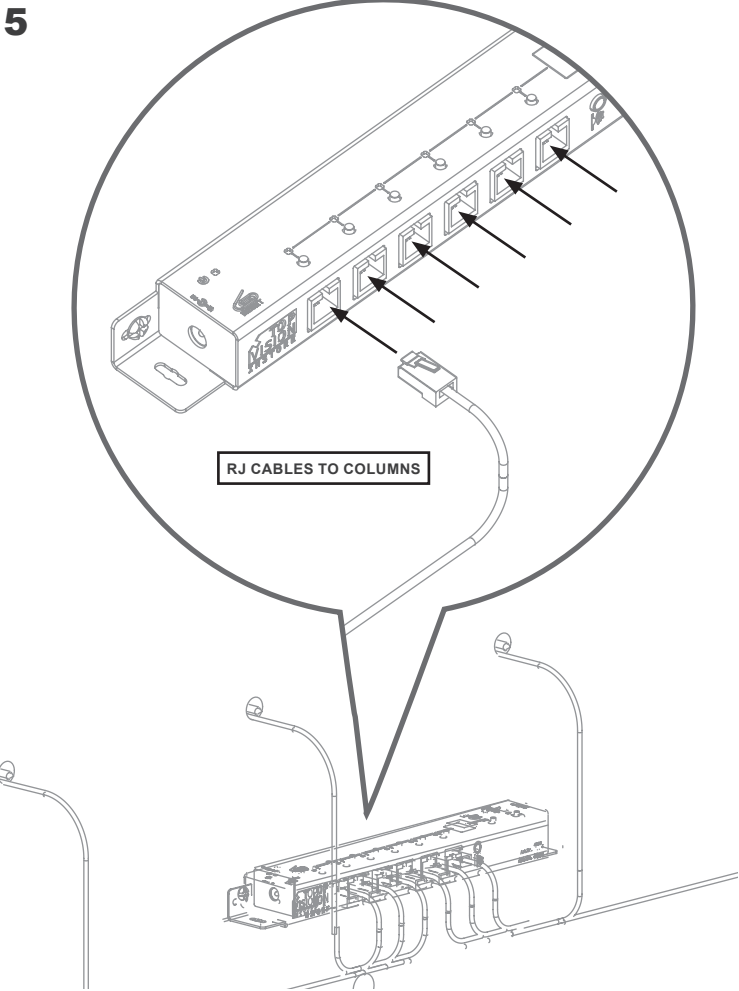


# PROGRAMMING

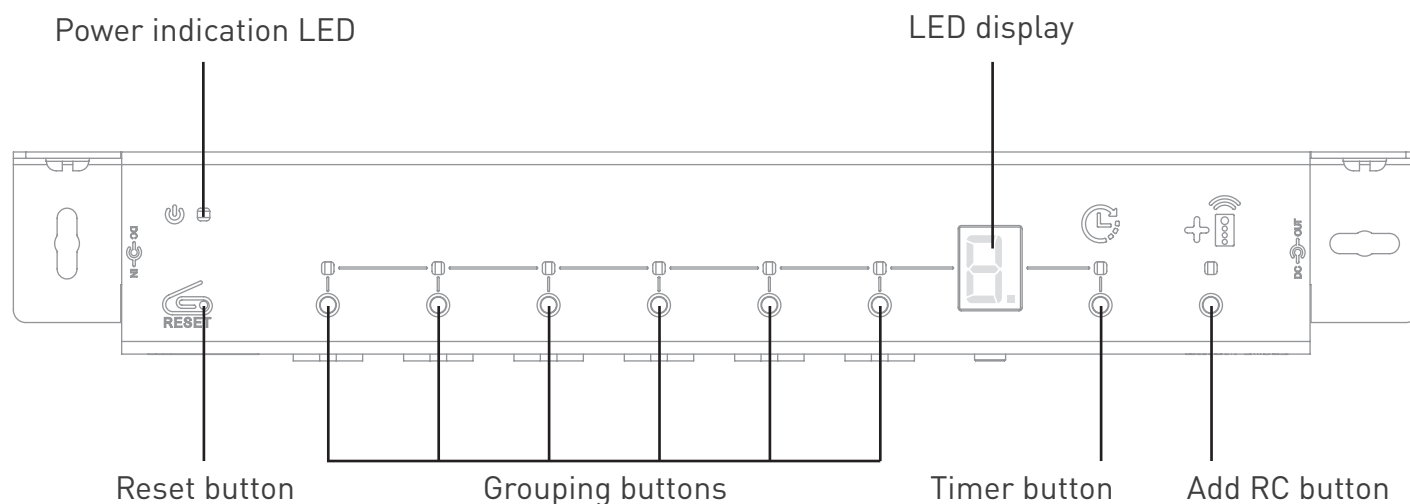


## ADDING REMOTE CONTROL IR CODES

- A**
- Press the “Add RC button” until you hear a beep.
  - The corresponding LED will lit up.
  - The “LED display” will show an animation.
  - As long as the animation is running, you can add IR codes.

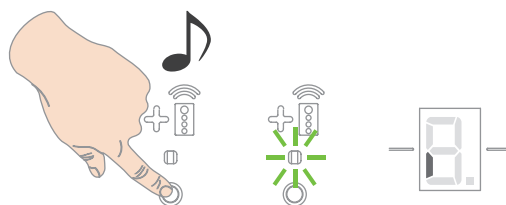

- B**
- Aim your remote control at the receiver eye and press the button of the remote control.
  - A short melody will confirm if the new IR code was accepted.

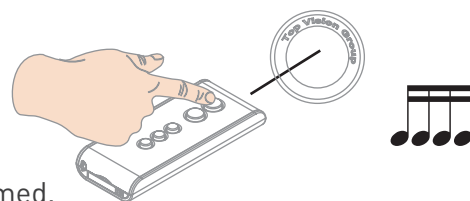

Note! 2 low beeps will tell you that this IR code was already programmed.

- C**
- Again, press the “Add RC button” to exit the programming mode.
  - 3 short beeps will confirm exiting.

Note! If this last step is forgotten, the system will automatically exit the programming mode after 16 seconds, confirmed by 3 short beeps.



## REMOVING ALL REMOTE CONTROL IR CODES

- Press the “Reset button” with a paperclip until you hear a beep.
- All known IR codes are now deleted.



Note! This action has no effect on the timer settings.


Your display will now no longer react to any remote control.

Add a new IR code by following the steps in the previous paragraph.

## CREATING GROUPS OF COLUMNS

Each grouping button corresponds to one of the RJ port which is connected to an eyewear display column. You can set any column to a specific group (1 to 3), allowing it to only react on the corresponding 1-2-3 buttons of your remote control.

- A**
- Press one of the "Grouping buttons" until you hear a beep.
  - The corresponding LED will lit up.
  - The "LED display" will indicate to which group the eyewear display column currently belongs. 0 = no group settings, 1 = group 1 and so on.
  - Keep pressing that group button until the "Led display" indicates the desired group number.

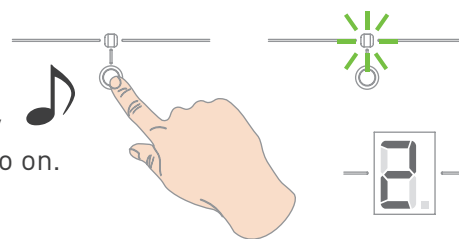

- B**
- As long as the LED is lit, you can switch between all group buttons, changing each group settings for each eyewear display column.
  - To exit the programming mode, wait 8 seconds. The LED and LED display will automatically switch off.
  - You can start regrouping any time you like by simply pressing one of the "Grouping buttons".




Note! pressing the "Reset button" has no effect on group settings. You can only change the group settings by using the "Grouping buttons".

## CHANGING THE TIMER INTERVAL FOR AUTOMATIC CLOSING


By setting the timer interval, your eyewear display column will close automatically after a set time period. (1 to 9 minutes)

- Press the "Timer button".
- The corresponding LED will lit up.
- The "LED display" will indicate how many minutes the current interval is.
- Keep pressing the "Timer button until the "Led display" indicates the desired amount of minutes you want to have the eyewear display column to remain open before automatic closure.
  - 0 = No automatic closure.
  - 1 = Automatic closure after 1 minute.
  - 2= Automatic closure after 2 minutes.
  - Etc.

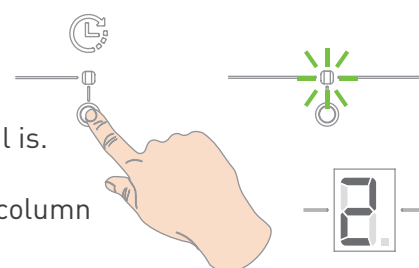

## SYSTEM ERROR

 When one of the LEDs above the "Grouping buttons" lits up in red, that corresponding RJ port is overloaded or malfunctioning. Contact your local Top Vision dealer when this happens.



**Head office - The Netherlands**

Top Vision Group B.V.  
Waarderweg 58  
2031 BP Haarlem  
The Netherlands

Tel: +31 23 517 66 77  
Fax: +31 23 531 02 41  
[info@topvisiongroup.com](mailto:info@topvisiongroup.com)  
[www.topvisiongroup.com](http://www.topvisiongroup.com)